


TAPPO RACCOLTA CONDENSA PD 127

Deve essere montato sempre alla base di ogni T e di ogni derivazione.

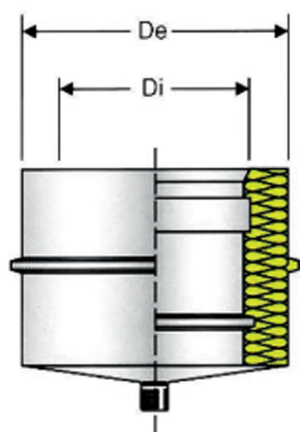

D	De
80	130
100	150
130	180
150	200
180	230
200	250
250	300
300	350
350	450
400	500
450	550
500	600